

Users manual for MP3-players

1. Press and hold **button 1** for 4 seconds until the green light shows. The sound is now playing.
2. Shift to the next soundtrack by pressing **button 2**.
Shift to the previous soundtrack by pressing **button 3**.
3. Stop the soundtrack by pressing **button 1** lightly until the red light shows.
Start the soundtrack by pressing **button 1** again.
4. Adjust the volume by pressing **button 4** (volume increases) or **button 5** (volume decreases)
5. Stop the playing temporarily by pressing **button 1** lightly until the red light shows.
6. Shut down the mp3-player by holding down **button 1** for 4 seconds until the light goes off.



Soundtrack order:

1. Guide to the exhibition (Norwegian).
2. Guide to the exhibition (English).
3. Yoik about the **The Grouse**, traditional yoik with the artist Ande Somy.